

	2	1			
oduct code	Product Name		PC		
(U2372	Spa Frog In-line house		1		
00247	Jet water ciculation self-leveling		1		
00245	Jet water circulation self-levelling nut		1	1	
00246	Sealing for jet water circulation		1	F	
00169	Jet - 20 SB - Ozone 90°				
(U1830	Filter house for floating 50 sqf filters				
CM0531	Underwater Light - House RD				
(U1720	Suction 48				
E0505	Suction 2" chrome thick with seal V2				
00244	Sealing for self adjusting s	uction head nut	2		
00243	Self adjusting nut for suction head		2		
CM0846	Circulation pump WTC50M 250 W 0.33 Hp		1		
CM0080	Spa Pump 3 HP - One Speed		1		
CM0999	Ozone - Generator P54 100 mA		1	E	
CM0755	Control box In.YE-3		1		
CM0763	Control Panel 1 Button		2		
00214	Jet 2" - transparent 1 Hole transparent V3 Wellis				
00217	Jet 3" - transparent 1 Hole Rotation transparent V3 Wellis 1				
BE0506	Ball Valve 48		1		
CM0759	Control Panel IN.K300 - C	One Pump	1		
			•		

#### D

				wellis magyarorszag zrt.		
ds: 230 V - 1x16A - 50Hz / Opt.El. needs: 400V - 3x20A - 50Hz						
5 - AE00361 Control box: Gecko IN.YJ_2 + In. K300 +4kW						
iner Sándor Pr. No: Fe. No:		Number: WM00732				
ndor - 2022. 05. 18. 16:24:41			M 1:8	page 1 / 2		

	I				
8	7	6	5	4	3

# **INSTALLATION INSTRUCTIONS**

Installation, connection and electrical installation can be done only by professionals!

The given dimensions are for information only, they can differ in reality than written on the drawings, due to the manufacturing technology of the pools.

#### **ATTENTION!**

Pools are installed only when electric schock protection compliance of the installed residual-current device is stated by the installation personnel in written form.

# **COMMISSIONING INSTRUCTIONS**

### 1. Preparation of the area

Е

D

C

### a. Interior/Basement

In case of placing the pool inside a building take in consideration the following requirements: The base must have a proper drain channel to prevent water collecting around the pool. If building a new place for the pool, it is strongly recommended to install a floor drain to prevent damage due to water overflow or mechanical failure, etc.

If no floor drain is installed, our Company takes no responsibility for occuring damages.

Inside the room, where the pool is installed, humidity can highly increase. To prevent precipitating water and occurance of fungus, proper ventillation of the room is highly recommended. It is recommended to install a dehumidifier device in the room.

#### b. Outdoor/Closed terrace

For proper installation of the pool, a solid, horizontal base is essential. Make sure that the pool is properly supported.

You must know the load capacity of the base.

Consult a specialst in architecture or a static engineer.

You can find the weight, contents and parts of the pool on the data table.

This weight should not exceed the calculated static capacity, otherwise damage can occur on the pool or base.

If the pool is installed outdoor, it is recommended to build a horizontal, reinforced concrete base with min. 10-15 cm thickness.

It is appropriate to make the drain channel in the base on the drain side of the pool. Its purpose is to take away splash water around the pool, or drain the released water. It is also necessary to provide water drainage in the manhole.

The manhole should also ventillate properly. It is recommended to install an exhaust fan or other ventillation device.

Do not expose the empty pool to direct sunlight without adequate protection (pool cover). The long lasting sunlight can damage the surface of the pool or other accessories. The acrilic surface quickly absorbs the heat from sunlight. Due to high surface temperature, the pool may be damaged.

In case the pool is installed between glass walls, prevent sunlight directly reaching the pool through the glass. Otherwise temperature can get very high.

#### 2. Installation of the pool

When the pool is built-in (lowered into the ground), it is necessary to build a min. 60 cm wide manhole around the pool, to provide space for maintenance works. When lowering the pool, **the acrilic side must be above the ground**. When not fulfilling these conditions, installation may fail! The incurring cost of a possible lifting operation is borne by the customer!

#### 3. Electrical installation

#### You must install a circut breaker dedicated only for the pool, no other devices allowed to connect.

#### Cable length/cross-section specifications:

- Minimal demand: Until 10 m cable length: 1x16 A, 3x2.5 mm2 cabling (230V) - in this case the 3 HP motor and the heating CAN'T work simultaneously.

- Total demand: Until 10 m cable length: 1x25 A, 3x4 mm2 cabling (230V) - in this case the 3 HP motor and the heating CAN work simultaneously.

- If more than 10 m of cable is needed, consult a specialist.
- Installing the cables is recommended through the bottom cover (tray) by drilling a hole and using a cable gland. Recommended direction is shown on the drawing. Min. cable length for installation is 3 m.
- The exact way of electrical installation is always unique, highly dependant on the location and environment of the pool.

6

Additional electrical installation (cable, circuit breaker and residual-current device) is the customer's responsibility.

These parts are not included in the pool packaging, need to be purchased separately.

Every pool has a dedicated installation drawing.

Make sure that the pool is connected to a 30 mA residual-current device.

Use copper wiring only.

8

If a fuse fails, replace it only with same type of fuse with same technical parameters. The device must be connected to the house's Equipotential Bonding Grid.

			Sheet name: INFO				
			File name: FJ_WM00732_ENG_Porto medence				
			Dimension SPA:	1900x1800x8	50 mm	Min.El. nds	
	1 person ~75 kg		Weight of the SPA	235 kg	Raklap 210	0x950x145	
	Water disp.:	300 kg	Rim height:	140 mm	Approved by	y: Lostein	
	Minimum water:	782 liter	Created: 2022. 05	. 18.	Drawer: los	teiner.sand	
5			1	File path ·····> C:IWELLIS_PDMBelso_PDM_doksikIUj_Dokumentum_rendezesiFJ_WM_100i			



